



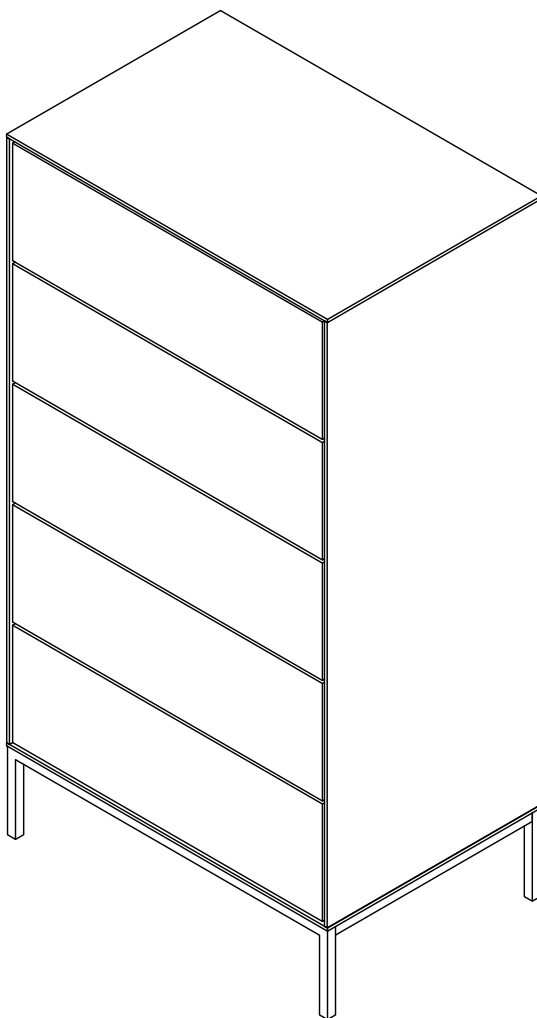
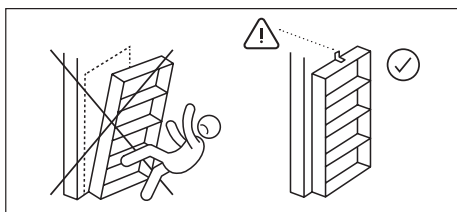
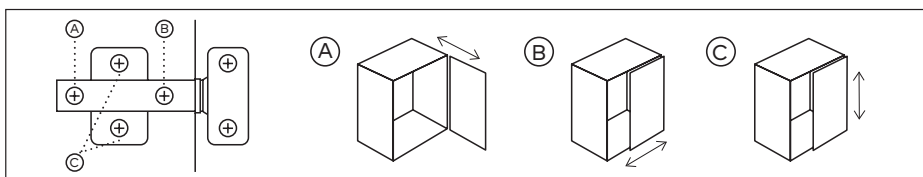
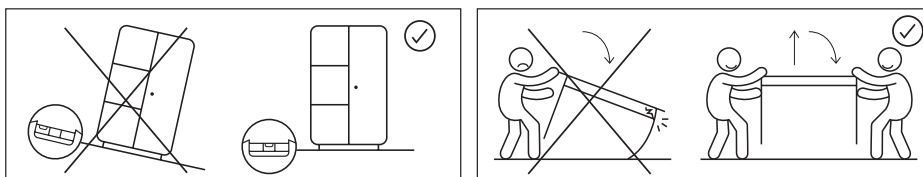


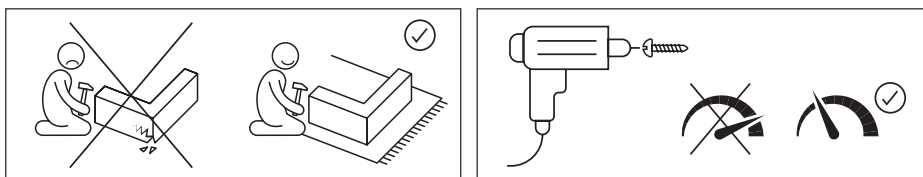

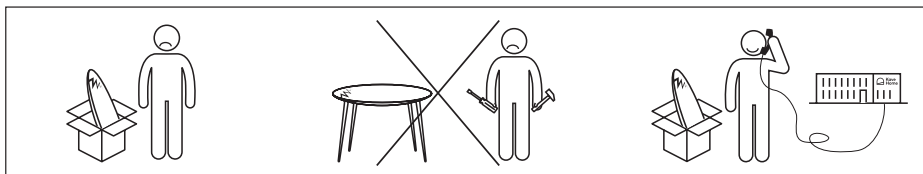


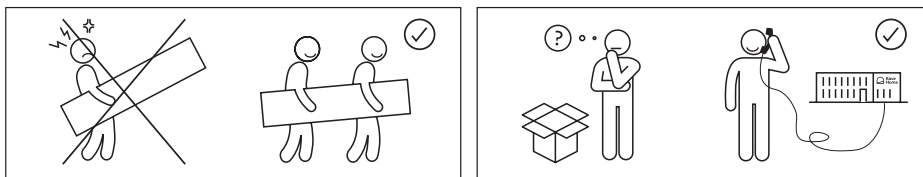


45 min



x2




x2



x1




(1)x1

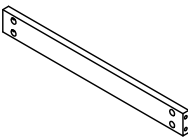

(2)x3




(3)x1




(4)x1




(5)x1




(6)x1

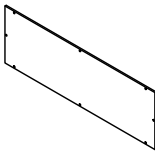


(7)x1



(8)x1



(10)x2



(11)x2



(12)x5




(13)x5



(14)x5



(15)x5



(16)x5



(17)x5



Ax1(m4)



Bx12(ø15x12)



Cx12(M6x45)




Dx20(ø20)



Ex28(ø3.5x20)



Fx40(ø3.5x16)



350mm

G=5 SET



Hx8 (M6x12)




Ix4(M6x15)



Jx20(ø6x25)



Kx60



Lx60(M5x25)



AAx4(ø3.5x20)



ABx4




ACx4(ø3.5x50)




ADx4




AEx2

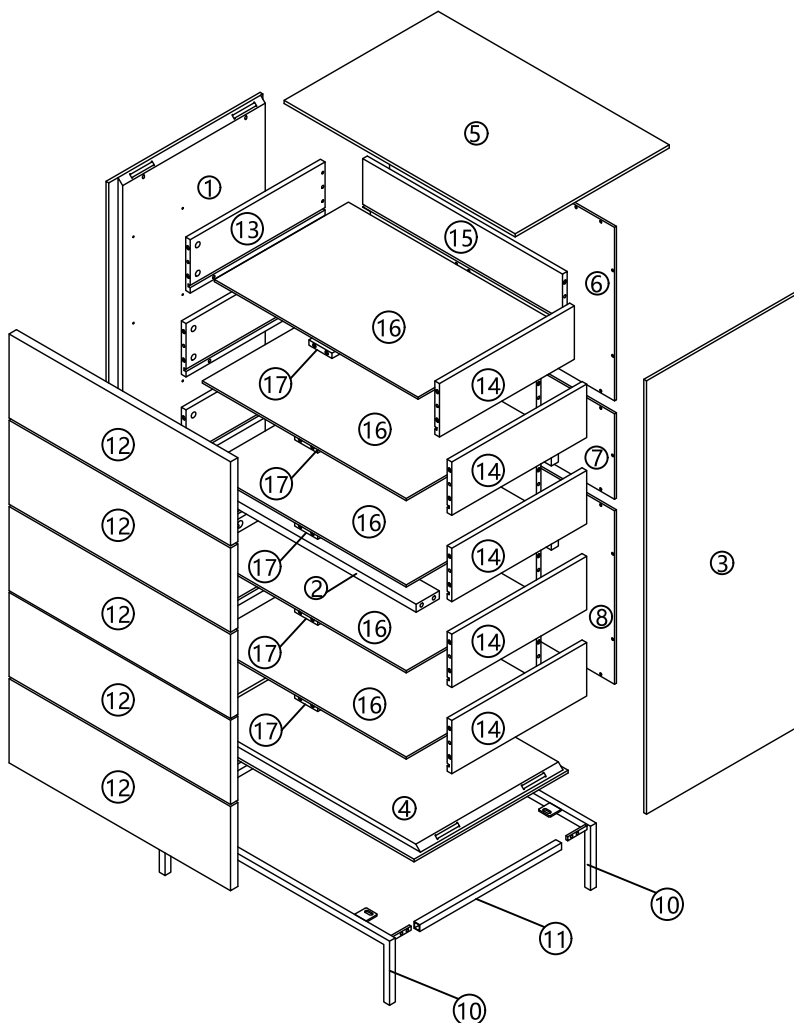


1

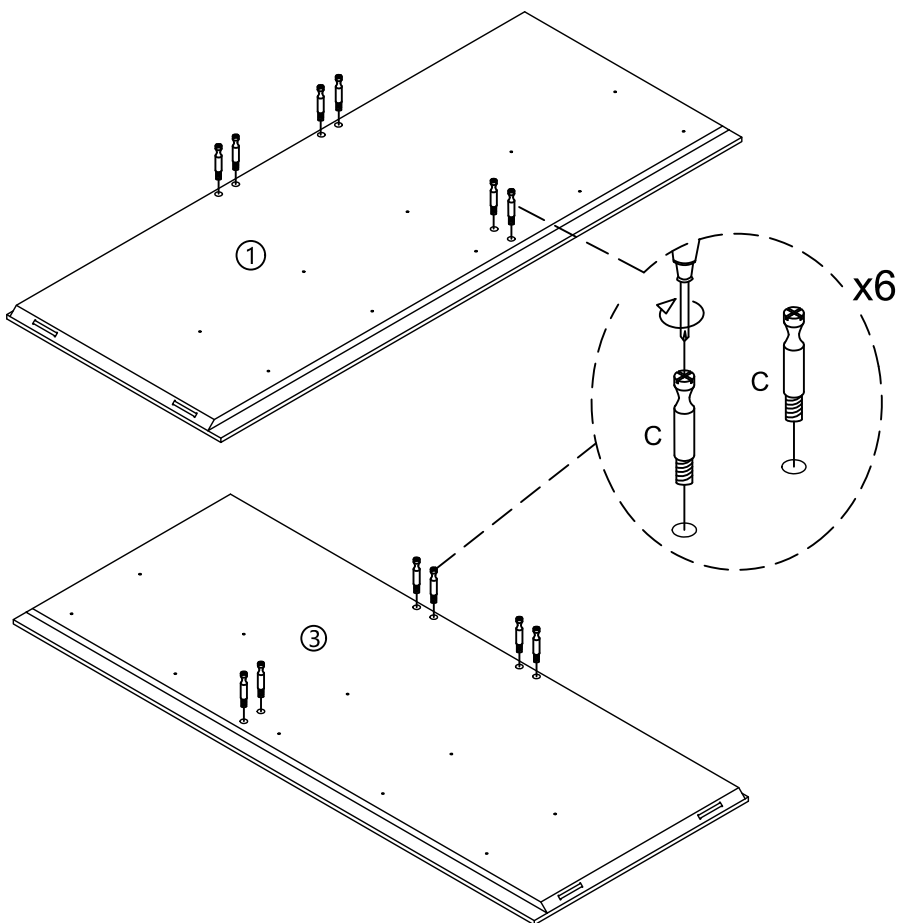





2

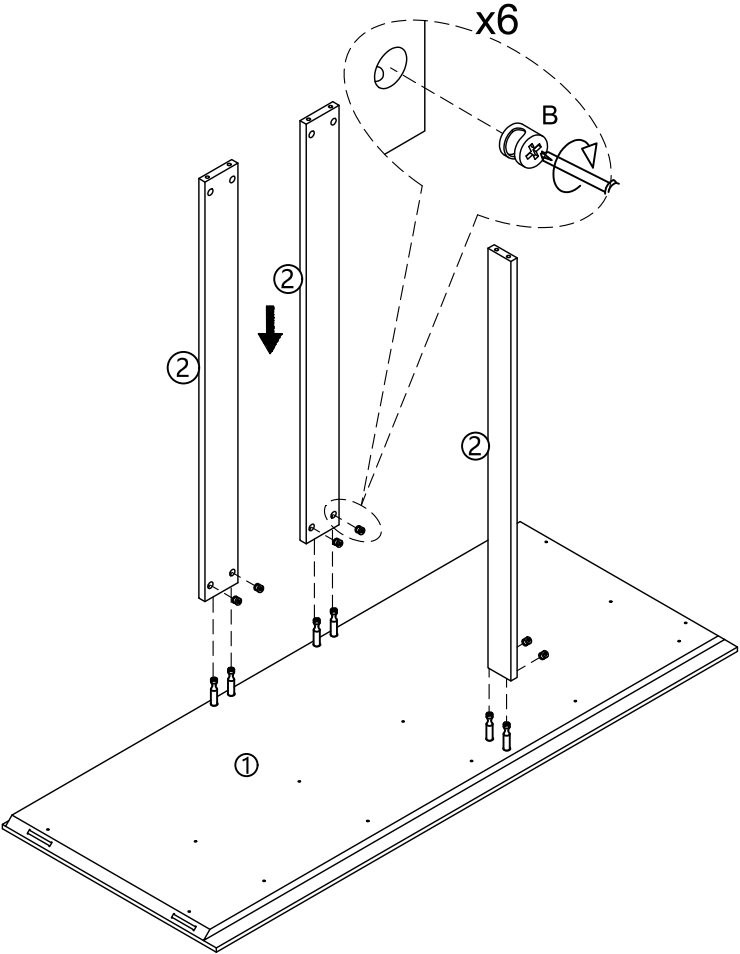



3

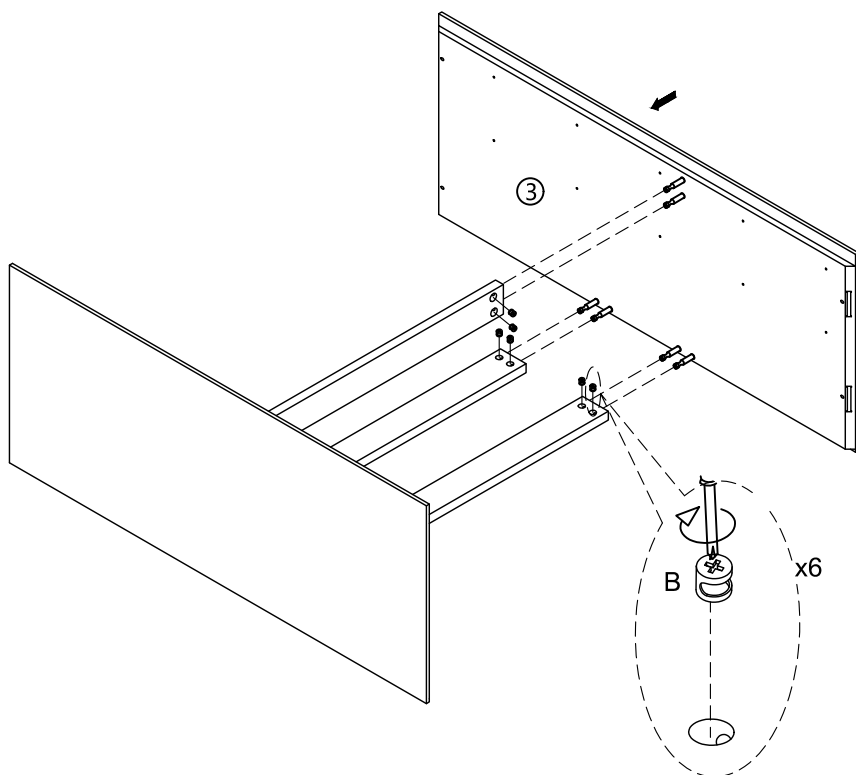


4

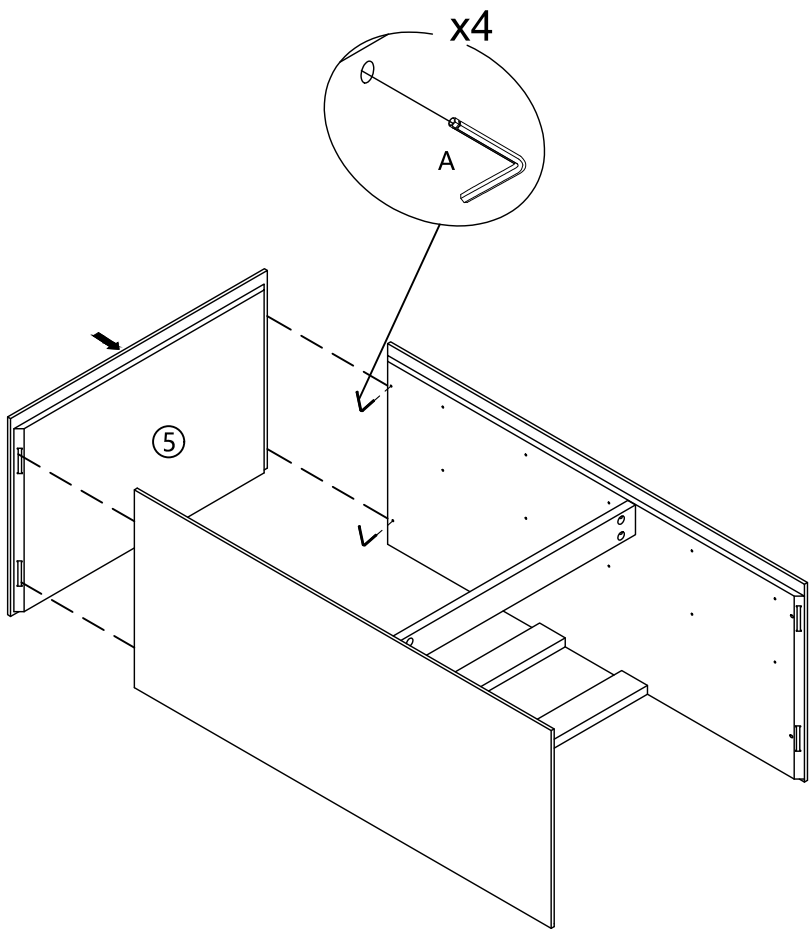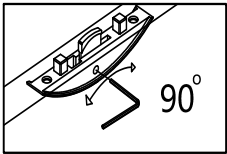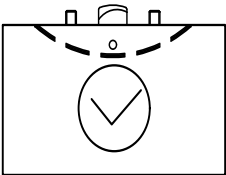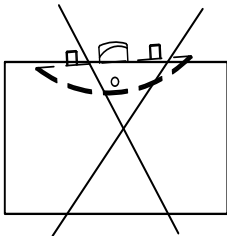


5

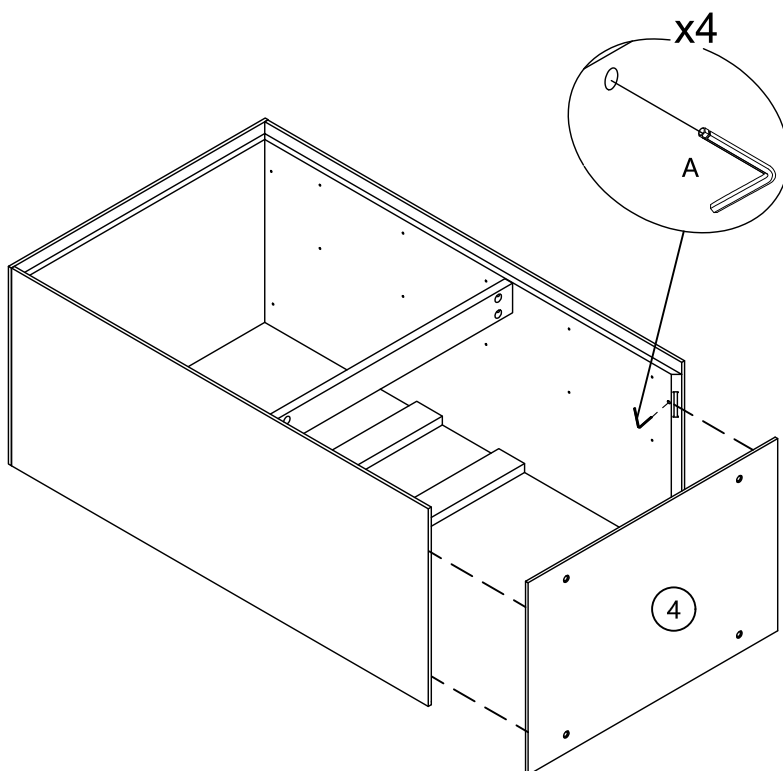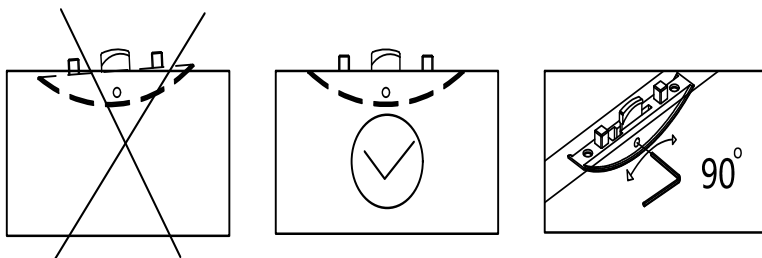



6

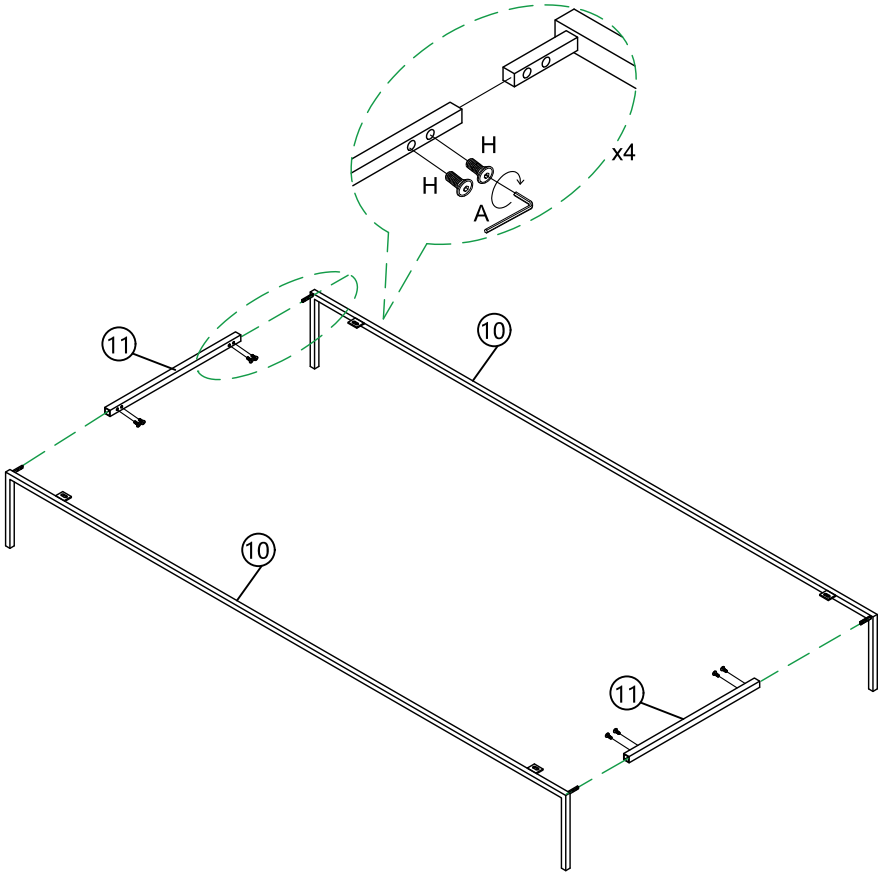

7

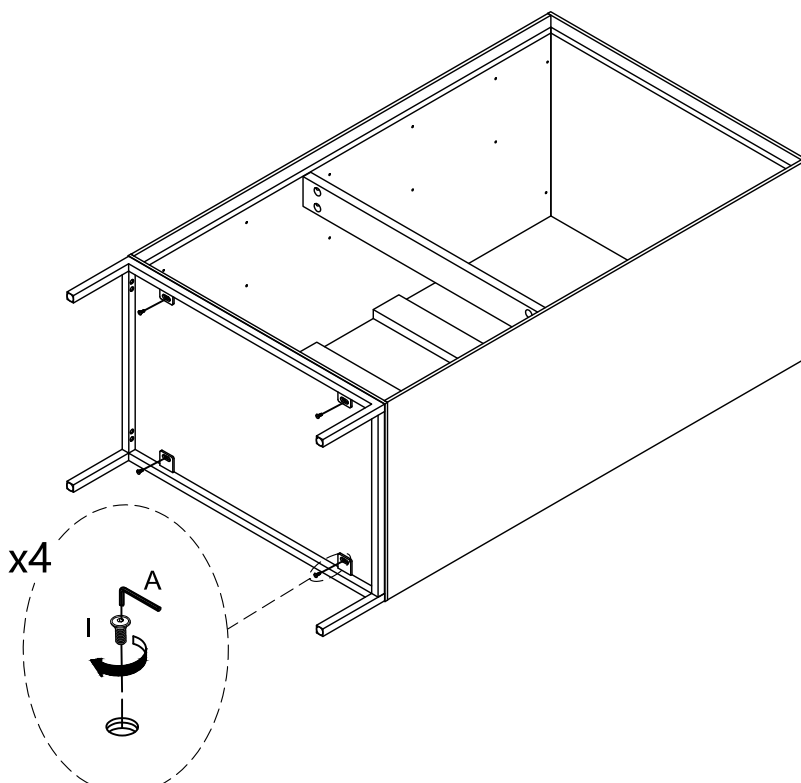


8

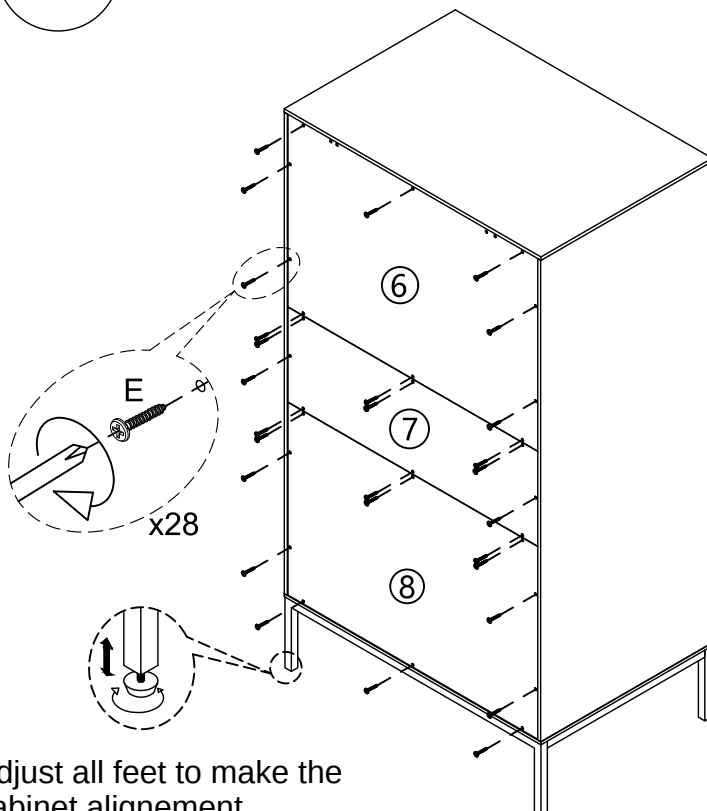
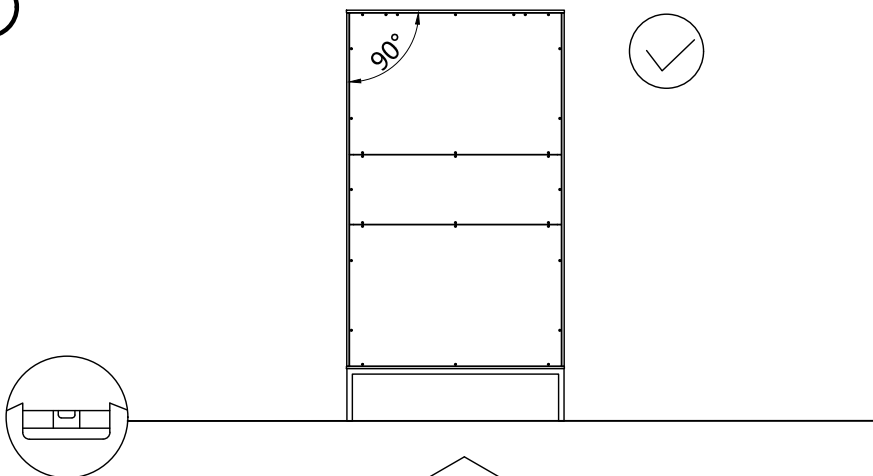


Adjust all feet to make the
cabinet alignment


9

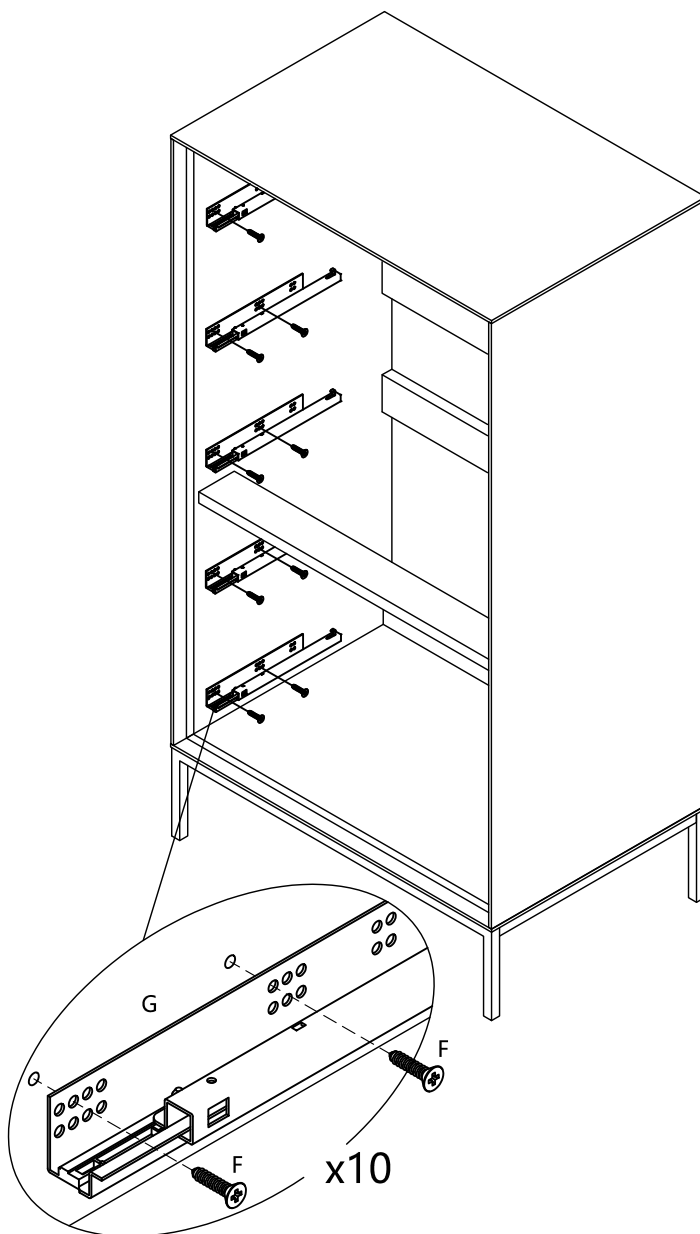

10

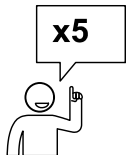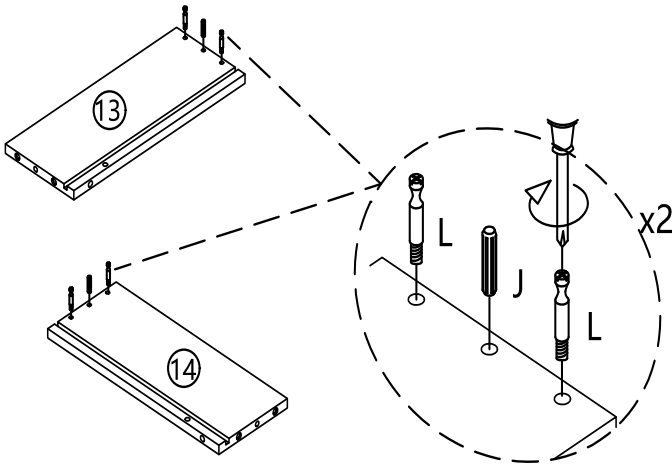


11

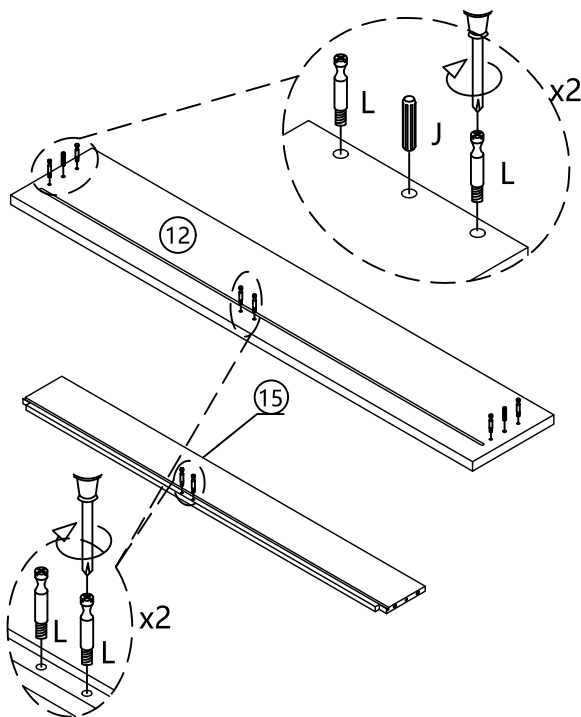



x5




12

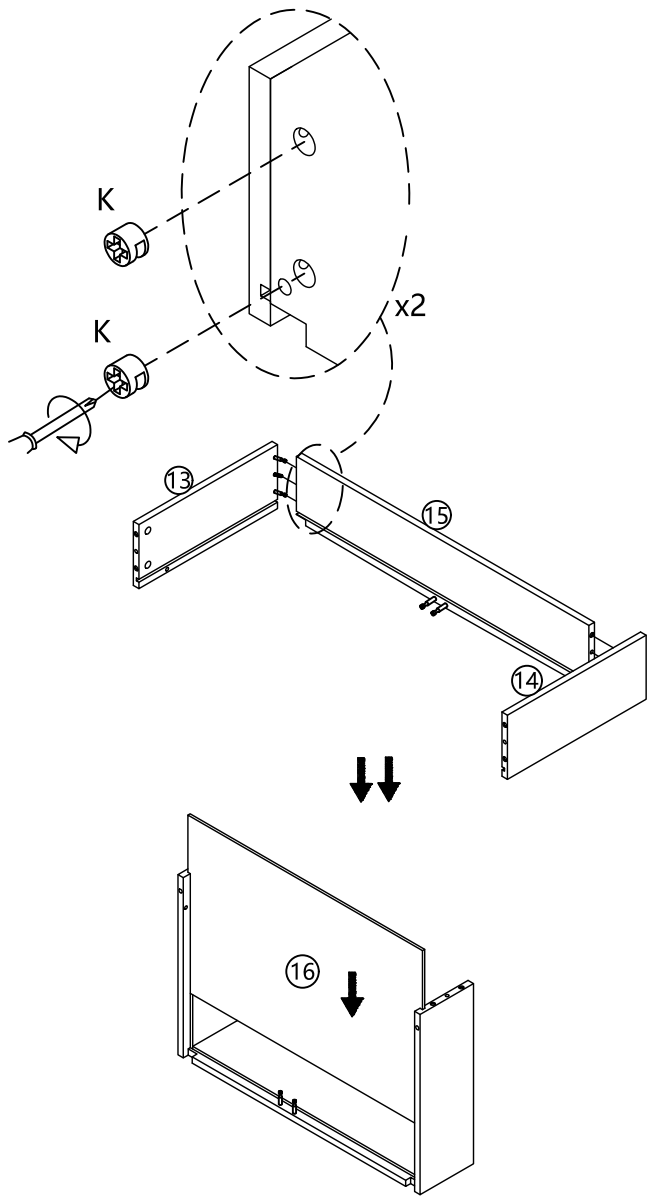


13

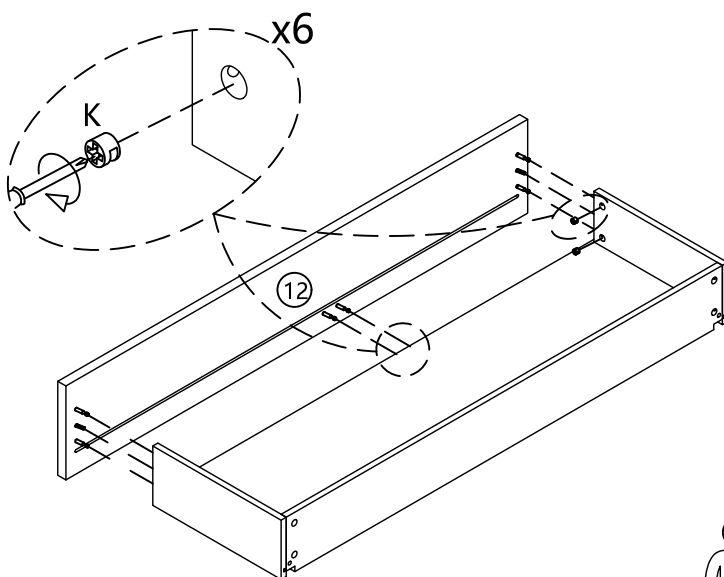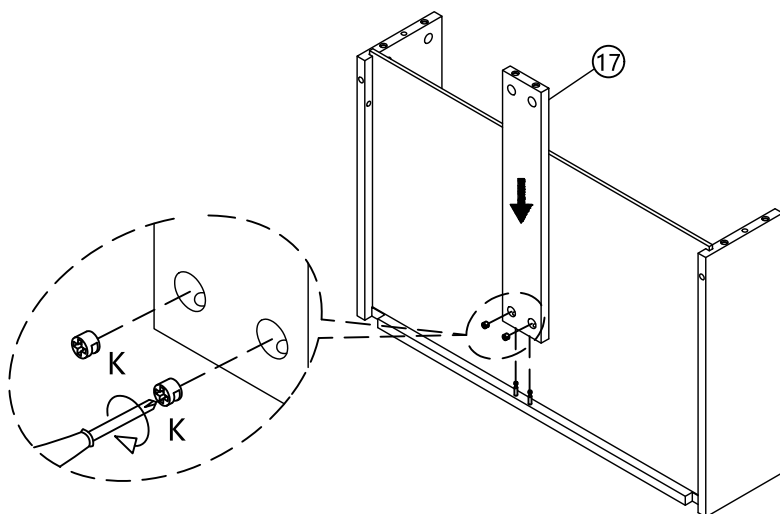


14

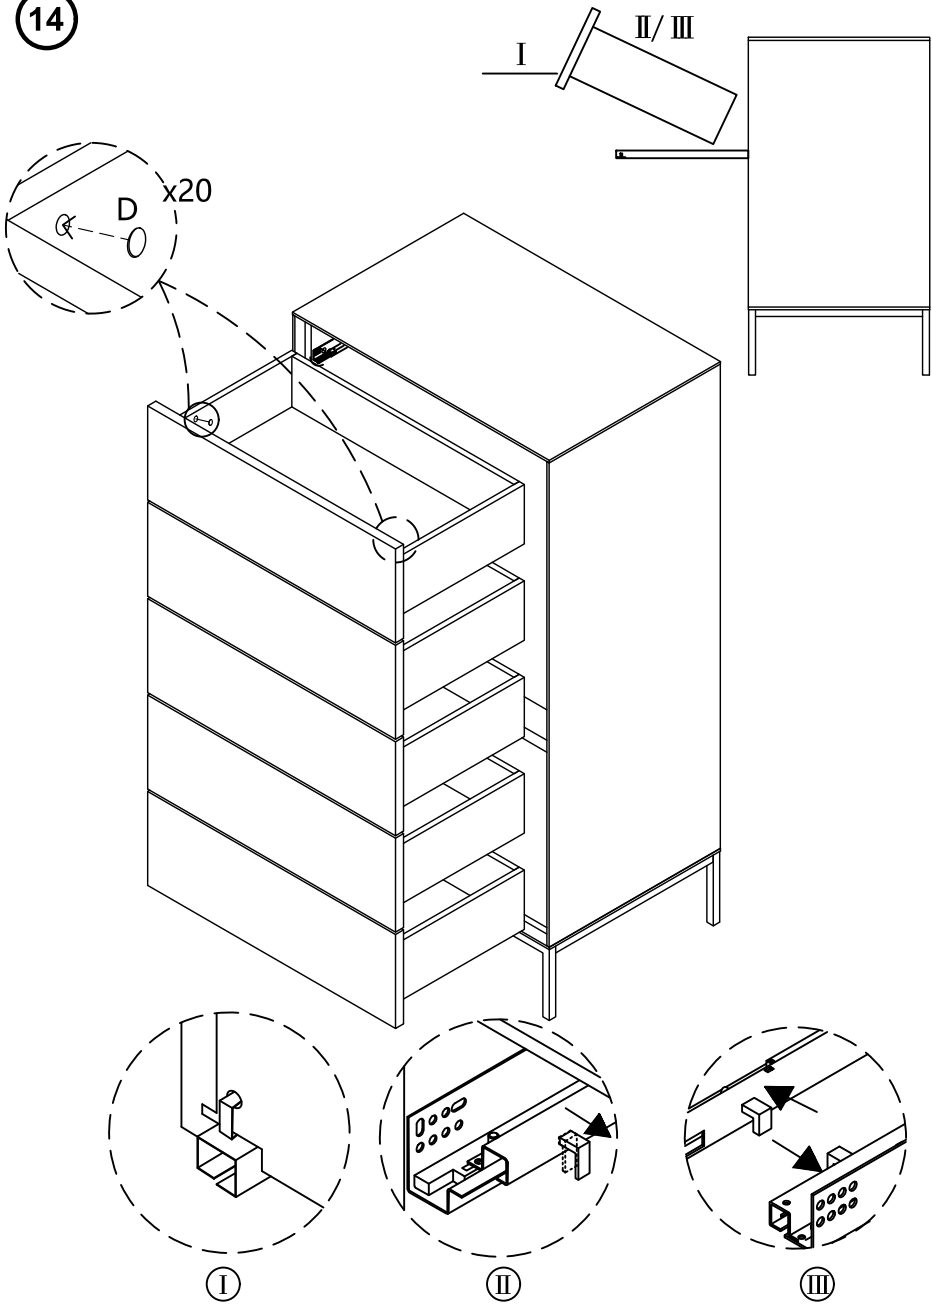


15

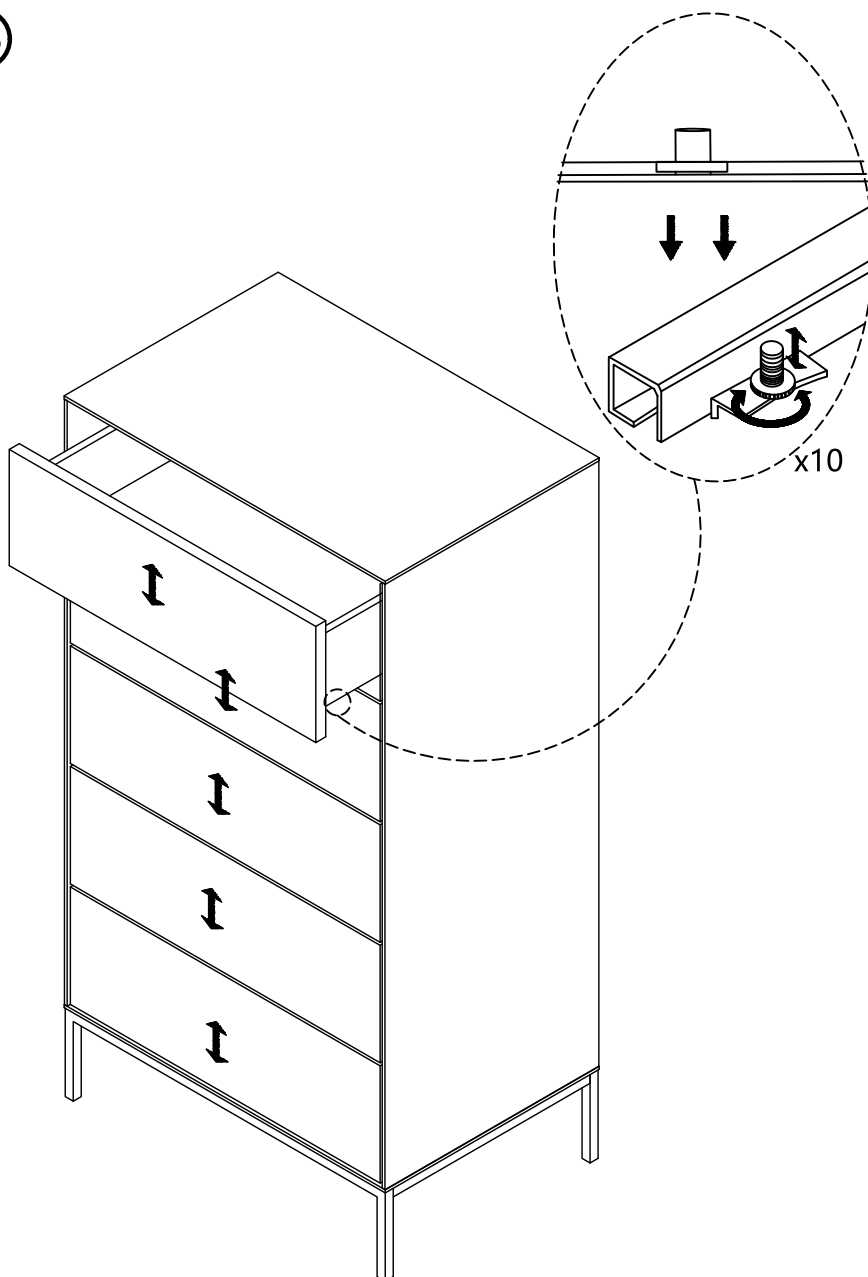



16

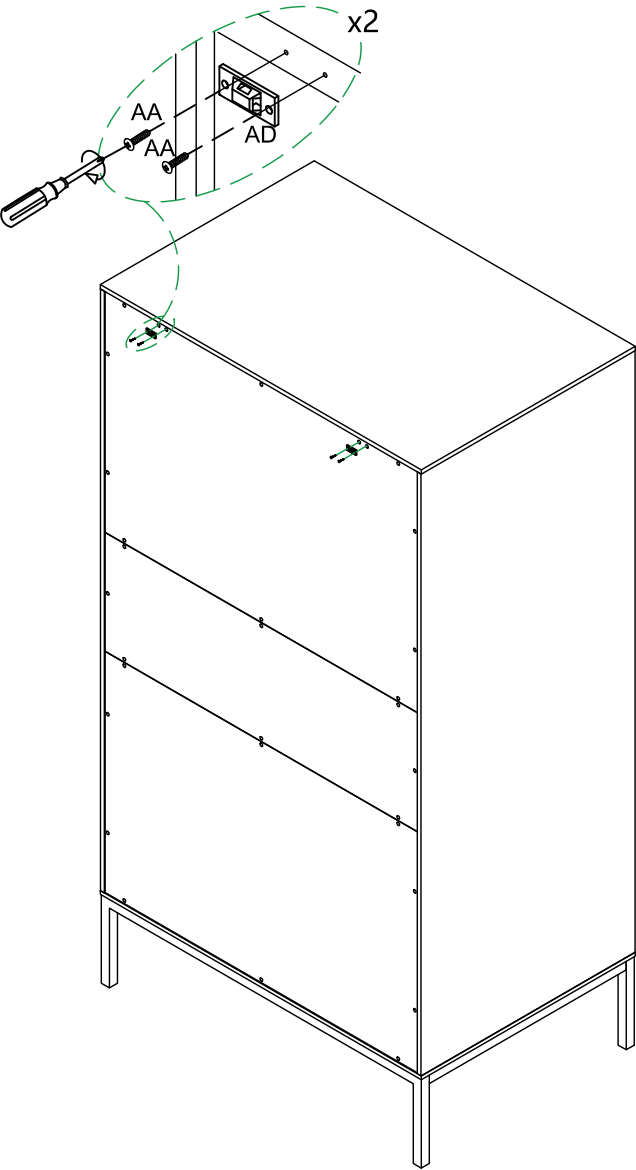

17

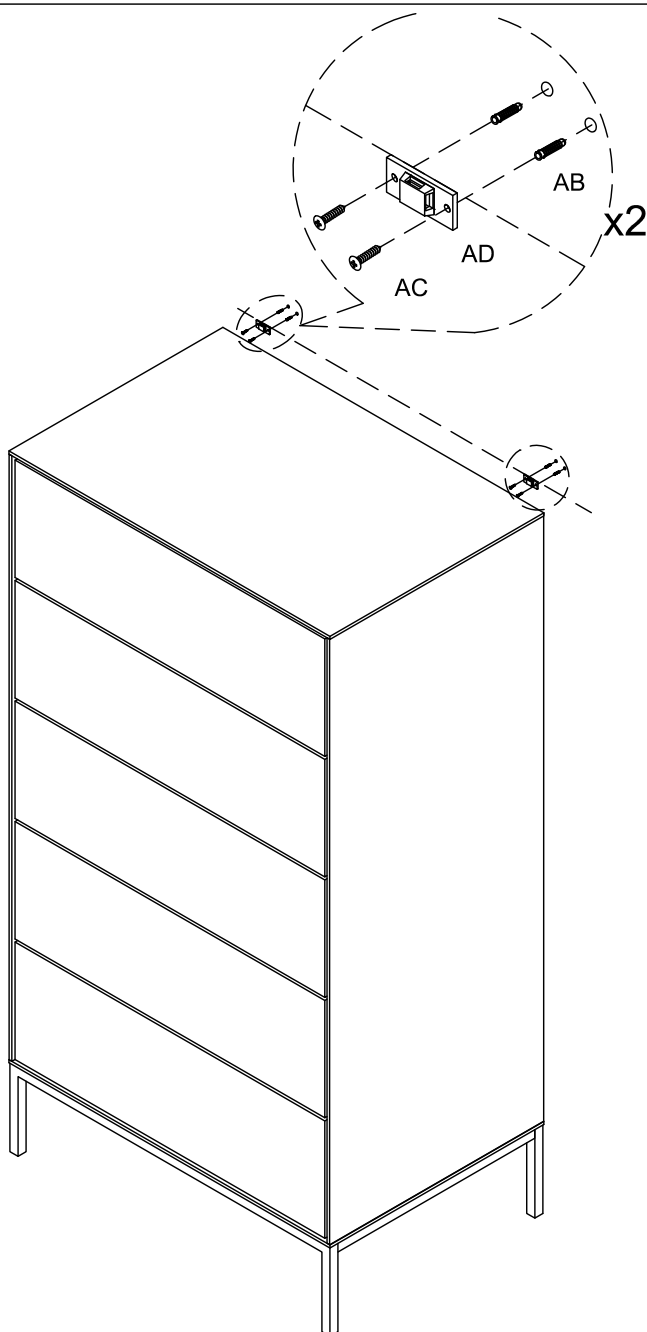

18

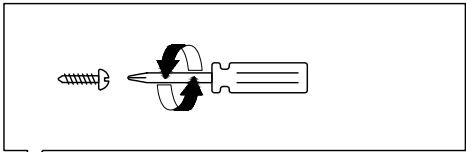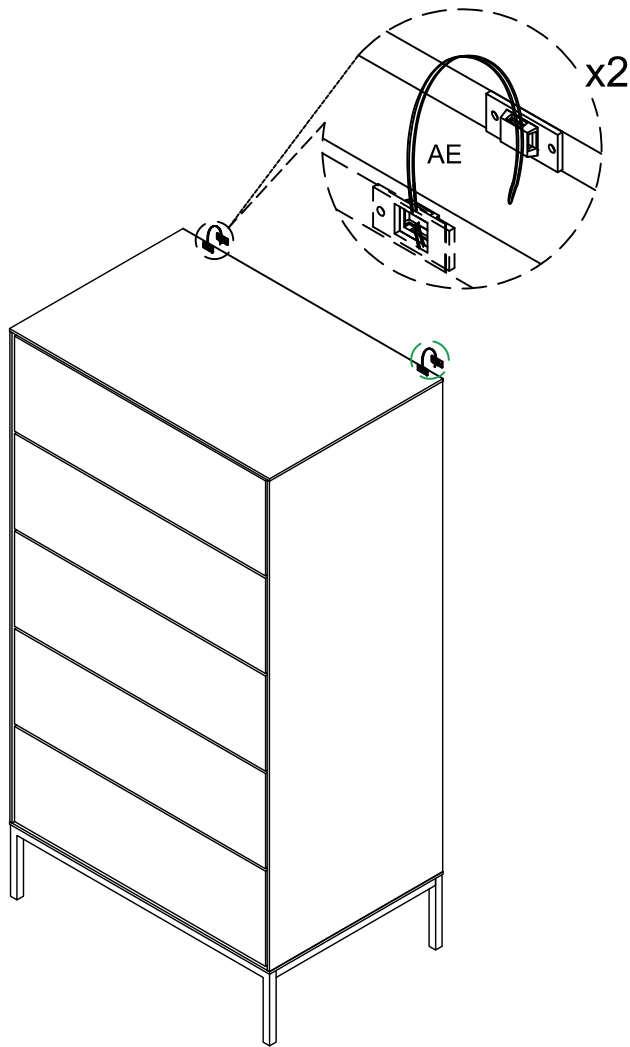



THAT'S ALL FOLKS

Share your style!

#KaveHome

